 


AEG

 


aeg.com/register

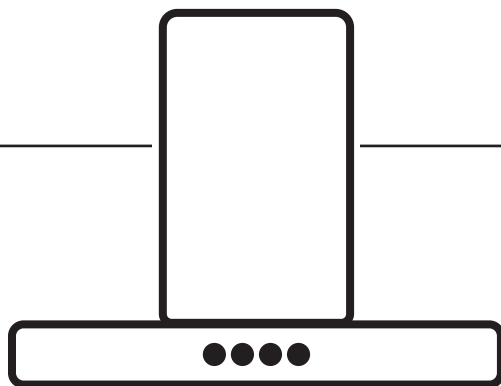 


DPB3640M
DPB3940M
DPE5650M
DPE5950M
DPE5650W
DPS3640AM
GP55D61M
GP55D61W
GP55D91M

NDP5591B
OP53D61M
OP53D91M
TP53D61GM
TP53D61M

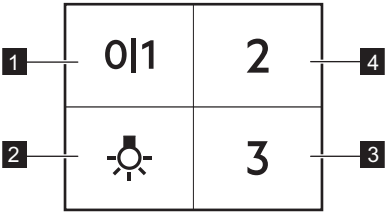

NOISES

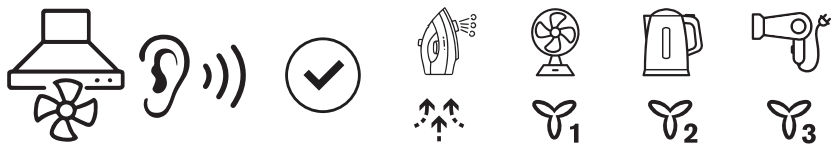

Subject to change without notice.

EN | 1. SAFETY INFORMATION AND INSTALLATION

⚠ WARNING!
Refer to the separate Installation Instructions booklet for Safety Information and Installation.

⚠ WARNING!
Read carefully the Safety chapters before any use or maintenance of the appliance.

2. DAILY USE

2.1 Control panel functions
Refer to the illustration of the control panel overview at the beginning of this manual.

i To access the control panel, open the hood drawer by more than 5 cm.

1 **0|1 First speed / off** - Press to turn on the hood at first speed. To turn off the hood press the button again or close the drawer. Use for heating food or cooking with covered pots.

2 **Lamp** - Press to activate or deactivate the light. The light operates independently of other functions. Closing the drawer does not affect the light.

3 **Third speed** - Press to set the hood to third speed. Use for boiling or frying large amounts without a lid or for cooking on multiple cooking zones or burners.

4 **2 Second speed** - Press to set the hood to second speed. Use for cooking with covered pots on multiple cooking zones or burners, gentle frying.

 It is recommended to run the hood for about 15 min before and after cooking.

 Closing the drawer saves the last speed setting. Opening the drawer starts the hood at the last selected speed.

3. CARE AND CLEANING

3.1 Cleaning the hood

- Clean the hood and the grease filters every month to prevent surface damage.
- Do not use abrasive detergents or brushes. Clean the hood surface with a soft cloth, warm water and a mild detergent.
- Clean the interior and the grease filters to remove grease. Grease or other residues can cause fire.
- After cooking, some hood surfaces can become hot. Allow the hood to cool. Dry the surfaces with a clean cloth or paper towels to prevent stains.

3.2 Cleaning the grease filter

IMPORTANT

Follow the icons   in the separate Installation instructions booklet for removing and refitting the grease filter.

- Clean the grease filter by hand (recommended) with a sponge and a non-abrasive detergent, or in the dishwasher.
- Set the dishwasher to a low temperature and a short cycle. Grease-filter discolouration does not affect hood performance.

3.3 Replacing the carbon filter

 For models supplied **with a carbon filter**, refer to the information below.

- The saturation time of the carbon filter varies with the type of cooking and the frequency of cleaning the grease filter.
- The carbon filter is not washable or regenerable. Replace it every 4-6 months, or more often with heavy use.

IMPORTANT

Follow the icons   in the separate Installation instructions booklet for removing the old carbon filter and installing the new one.

 For models supplied **without a carbon filter**, purchase the carbon filter separately. Some filters are washable or regenerable, others are not. Refer to the leaflet supplied with the filter.

3.4 Replacing the lamp

The hood is supplied with a LED lamp. This part can be replaced by a technician only. In case of any malfunction refer to Service in the Safety Instructions chapter (separate Installation Instructions booklet).

4. TROUBLESHOOTING

WARNING!

Refer to Safety chapters.

4.1 What to do if...

You cannot activate the hood

- Check if the hood is correctly connected to the power supply.

- No power supply. Check the fuse or the main switch. If the fuse or the switch continues to break the circuit, contact a qualified electrician.
- Check if the cabinet doors are aligned with the cabinet frame.

The lamp does not operate

- The lamp is defective. Contact an Authorised Service Centre.

Poor vapour extraction

- The fan speed is too low. Increase the fan speed.

5. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of ap-

pliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

